The Ultimate Item Finder

User Guide

SpotyPal











GET STARTED

1. Get the app

Download the app for free from App Store or Play Store

App Store



Download on the Google Play



2. Enable Bluetooth & Location

Turn Bluetooth on to enable the communication between your smartphone and your device. Turn on Location services to have the most up-to-date information about your device location



Bluetooth





Location



3. Sign Up / Log In

Sign Up or Log into your account.



4. Connect & Activate your device

- Click on the "Add" button
- Follow the in-app instructions to activate your device

5. Attach your device

Attach your device to the item you want to track



6. Keep your device & app connectedKeep SpotyPal running in the background to
maintain communication with your device



MAIN FEATURES

Find your missing item

Launch the app, ring the device and you will find it.

Find your phone

Use the device to ring your phone, even on silent.

SOS alerts

In case of danger, press the button on your device to send SOS alert with your location to predefined users.

Last seen location

Check on the map to see your missing item's last known location if it gets out of range.

™ Two-way Separation alert

Get notified if you accidentally leave your items or phone behind.

Not to forget lists

Create lists with items you want to have with you and make sure you have not left anything behind.

Share Device

Allows multiple users to the same device.

Mearby Alert

Get notified when your smartphone re-establishes the connection with your device.


M Alarm Clock

Use the Alarm in the App and the SpotyPal device will wake you up.

Crowd-finding

If your item is lost and the attached device is out of range, report it to the Crowd-Finding Community to help you find it.

Your device

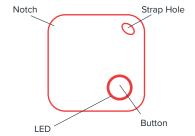

USE AND CARE

- The device is rated as Splash Proof only. Immersing the device underwater will cause irreparable damage.
- Exposure to extreme cold or hot temperatures can affect its performance.
- This device contains small parts that present choking hazard. Keep them away from small children and pets.

Change battery

- Open the device from the notch on the side using the plastic triangle piece as an opener.
- Replace the old battery with the new one. The battery type is CR2032.
- After putting the cover back, press the button to connect to your phone again.

Battery Safety



Dangerous. Keep the batteries out of the reach of pets and children. If swallowed, seek medical help immediately.



Fire hazard. Do not short-circuit the batteries. Batteries may overheat or explode.



Do not expose batteries to water or fire. Do not attempt to charge non-rechargeable batteries. The batteries might explode.

Disposal and Recycling

The packaging is made of eco-friendly, recyclable materials.

Batteries contain toxic substances that must be treated separately from domestic waste. The device has to be disposed separately from ordinary household waste at the end of its life.

We suggest contacting your local waste administration regarding the appropriate way of disposal and recycling so as to help conserve natural resources.

Warranty

The device has been manufactured and thoroughly tested to meet strict quality standards. The warranty covers defects in materials and manufacturing process.

For more details, visit www.spotypal.com/warranty



Online up-to-date User Guide at https://www.spotypal.com/user-guide

SpotyPal by Terracom
Ethnikis Antistasis 79, Katsikas, Joannina, 45221, Greece

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 16 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
 Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.